

GETTING STARTED SINRT INDUCTION RANGETOP QUICK START GUIDE

ZLINE
ATTAINABLE LUXURY®

V1.0.0 June 2026

Induction Operation



1. BEFORE YOU BEGIN

Ensure a qualified installer has properly installed the rangetop. Remove all packaging materials, protective film, and tape ensuring the area is well ventilated before operating the range.

2. CHOOSING THE RIGHT COOKWARE

For induction heating to work, cookware needs to be compatible with the cooking zones. Compatible options include:

- Cast Iron
- Stainless Steel (430 Grade)
- Multi Layer Magnetic Base
- Look for the Induction Icon



NOTE: If no cookware is detected, the display will show “**U**”.

COOKTOP CARE + MAINTENANCE

To maintain the longevity of the cooktop, we recommended wiping any acidic or sugary residue as soon as the appliance has cooled.

- Use non-abrasive, ammonia-free cleaners, or mild soapy water.
- For stainless steel, wipe with the grain. Do not use steel wool, bleach, or chloride cleaners.
- Stuck-on residue: Place a warm, soapy towel over the spill for 5–10 minutes. Gently remove residue with a plastic scraper and wipe clean.


NOTE: Choose spray formulas, not creams or pastes.

3. COOKTOP OPERATION

Place cookware in the center of the cooking zone. Turn the control knob clockwise to select a heat level from 1 (low) to 9 (high).

Power Levels (1-9)

- 1: Melting
- 2-3: Simmering, Sauces
- 4-6: Sautéing, Browning
- 7-9: Frying, Boiling
- P: Power Boost (Rapid Boiling)

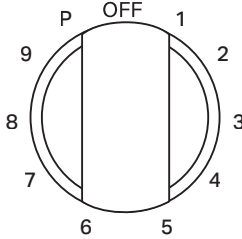

Power Boost Mode (P)


- Turn knob past level 9
- Automatically reduces to level 9 after 10 minutes
- Maximum boost levels vary by model

BRIDGE MODE

The Bridge Mode allows two adjacent cooking zones to operate as a single larger zone. Ideal for cooking with a griddle.

To Activate

- Turn both knobs on same side to **P** for 3 sec
- “**Π**” appears on the display indicating Bridge Mode is active. The power level will appear indicating the main bridge burner.
- Adjust power using the main knob
- Turn main knob to **OFF** to cancel Bridge Mode

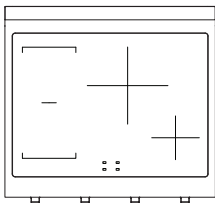

Power Management

- Same-side burners share a 4000 W maximum power limit
- Boost Mode will automatically reduce if the power limit is exceeded
- Cooktop power may reduce while the oven is operating

NOTE: If display shows “**H**”, the surface is still hot. Do not touch until indicator disappears.

4. COOKTOP SOUNDS

Cooktop Low Humming

- Caused by electromagnetic field and may increase at higher power levels

Cooktop High-Pitched Whine

- Can occur with lightweight/thin cookware
- Use of heavier, thicker pans typically reduces this sound

Cooktop Clicking

- Power is cycling to maintain temperature
- More noticeable at lower heat settings

Cooling Fans (Normal Operation)

- Cooktop cooling fan may run after cooking