




DUCTLESS INSTALLATION GUIDE

Applies to: Q Series / IRH Series / U Series Range Hoods

Step 1


- Measure and mark a round duct opening in the cabinet ceiling or in the soffit above the duct opening of the range hood.

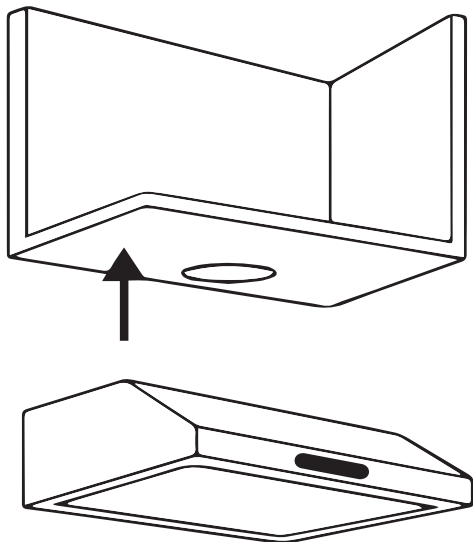

- Use a saber saw or keyhole saw to cut a round opening for the soffit/cabinet vent.

Step 2

- Continue to install the range hood as outlined in the installation manual.

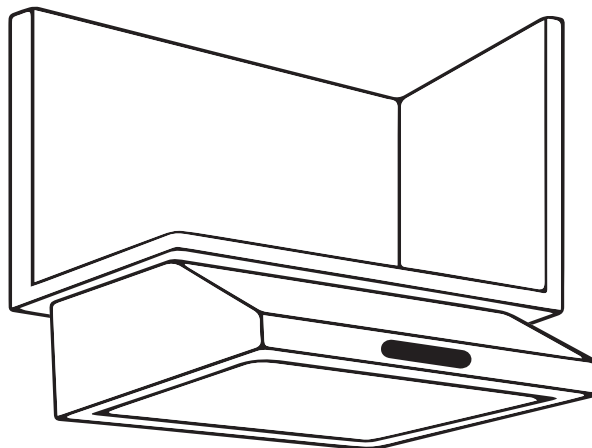


- Ensure the clearance above the stovetop is the recommended distance for optimal performance.


Step 3

- **Method 1:** Run attached ducting through cabinet as required. Attach grate on top of cabinet (sold separately). Make sure there is enough clearance to the ceiling.
- **Method 2:** Vent the range hood into the cabinet with an open door for proper recirculation.

Method 1: Venting Through Cabinet

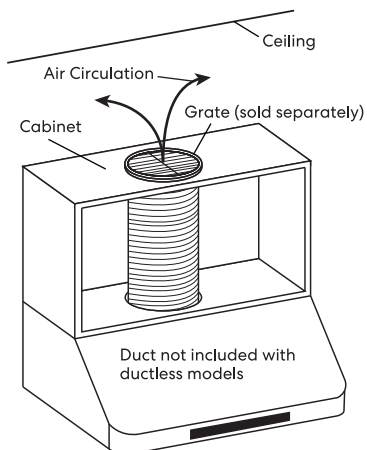


Method 2: Venting Into Cabinet

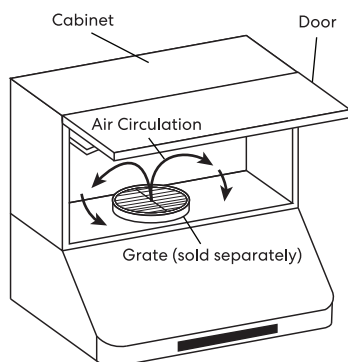

- **NOTE:** Grate is installed to prevent debris from falling into the unit.

Step 4

- Locate the motor and align the charcoal filter. Twist and lock the filter into place. Repeat for both sides or both motors.

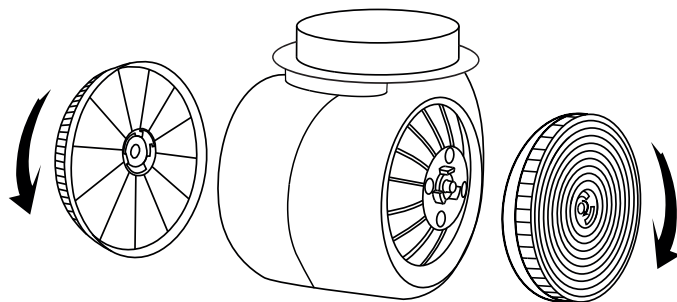

- Install the oil tray (if applicable), metal filters and connect the power.

Replacement charcoal filter kits can be ordered from www.cosmoappliances.com