

NOTE: IT IS VERY IMPORTANT TO READ AND FOLLOW THE DIRECTIONS IN THE INSTALLATION INSTRUCTIONS BEFORE PROCEEDING WITH THIS REAR WALL TEMPLATE.

This Rear Wall Template serves to position the bottom mounting plate and to locate the horizontal exhaust outlet.

1. Use a level to check that the template is positioned accurately.
2. Locate and mark at least one stud on the left or right side of the centerline.


NOTE:It is important to use at least one wood screw mounted firmly in a stud to support the weight of the microwave. Mark two additional, evenly spaced locations for the supplied toggle bolts.

3. Drill holes in the marked locations. Where there is a stud, drill a 3/16" hole for wood screws. For holes that do not line up with a stud, drill 5/8" holes for toggle bolts.

NOTE:DO NOT INSTALL THE MOUNTING PLATE AT THIS TIME.

4. Remove the template from the rear wall.
5. Review the Installation Instruction book for your installation situation.

Darle vuelta a la hoja para consultar la versión en Español.

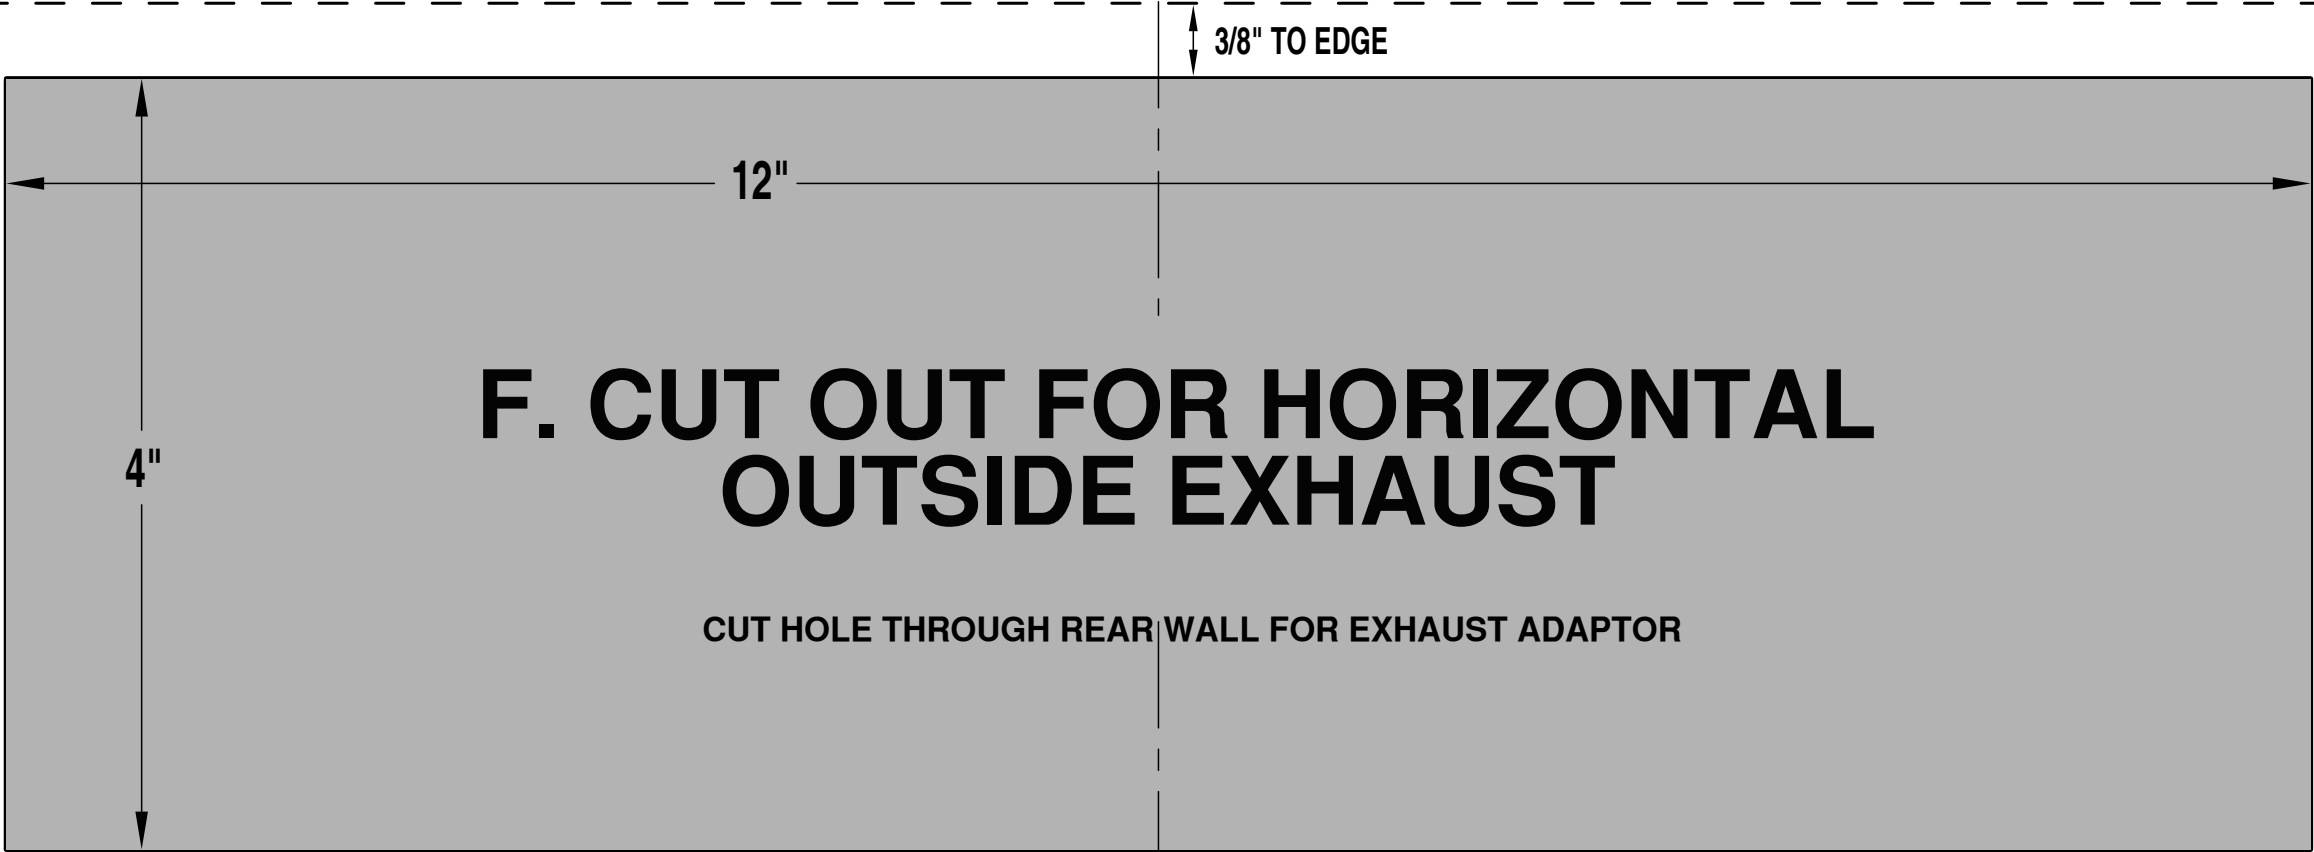

Trim the rear wall template along the dotted line.

CAUTION - IF EXHAUST ADAPTOR IS POSITIONED OUTSIDE RECOMMENDED DIMENSION, GREASE-LADEN AIR WILL DISCHARGE INTO HOUSE STRUCTURE.

30" MINIMUM WIDTH REQUIRED

REAR WALL TEMPLATE

Locate and mark holes to align with holes in the mounting plate.

IMPORTANT:

LOCATE AT LEAST ONE STUD ON EITHER SIDE OF THE CENTERLINE.

MARK THE LOCATION FOR 2 ADDITIONAL, EVENLY SPACED TOGGLE BOLTS IN THE MOUNTING PLATE AREA.

Locate and mark holes to align with holes in the mounting plate.

IMPORTANT:

LOCATE AT LEAST ONE STUD ON EITHER SIDE OF THE CENTERLINE.

MARK THE LOCATION FOR 2 ADDITIONAL, EVENLY SPACED TOGGLE BOLTS IN THE MOUNTING PLATE AREA.

PN:16170000A75109

